


**SAFETY INSTRUCTIONS**



**WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.**

- This product is intended for use in timekeeping.
- Do not use the product for any other purpose.
- Use the product in a well-ventilated area. Never block the air openings of the product or place it on a soft surface (i.e., a bed or a couch) where the air openings may be blocked. Wipe the air openings clean if they become clogged.
- Keep the Power Cord and product away from heated surfaces.
- Do not use the product near water or other liquids. Do not place or drop the product, Power Cord, or plug into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. Do not touch or reach into the water.
- Plug the product into a standard 120V AC electrical outlet.
- Do not place the Power Cord where it may be tripped over, pulled, or pinched.
- Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
- Disconnect the plug (do not pull on the Power Cord) from the electrical outlet.
- Never operate this product if it has a damaged Power Cord or plug, malfunctions or is not working properly, has been dropped, or damaged. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing. Return the product to a service center for examination and repair.
- This product is for indoor, non-commercial, non-industrial, household use only.

**CAUTION:** This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

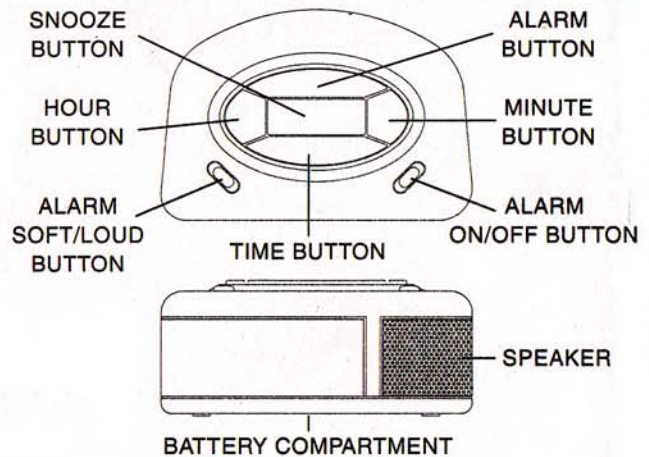

**Battery Backup:**

A 9-volt battery (not included) may be installed as a backup option to maintain the time if electrical power fails. In the event of a power outage, the time will not appear on the clock LED display; however, the clock will continue to operate and the actual time will be maintained. The clock LED display and other functions will resume once electrical power is restored. If used, the 9-volt battery should be replaced as needed. Remove the battery if the clock is not used or stored for long periods of time.

**NOTE:** Spent or discharged batteries must be recycled or disposed of properly in compliance with all applicable laws. For detailed information, contact your local county solid waste management authority.

**To set the time:**

1. Plug the product into a standard 120V 60 Hz AC electrical outlet.  
**NOTE:** The LED Display will blink until the time is set.
2. To set the current clock hour(s), press and hold the TIME Button; then repeatedly press the Hour Button until the correct hour(s) is reached.  
**NOTE:** The PM Indicator will illuminate to indicate PM hours.
3. To set the current clock minute(s), press and hold the TIME Button; then repeatedly press the Minute Button until the correct minute(s) is reached.

**To set the alarm:**

1. To set the alarm hour(s), press and hold the ALARM Button; then press the Hour Button until the desired hour(s) is reached.
2. To set the alarm minute(s), press and hold the ALARM Button; then press the Minute Button until the desired minute(s) is reached.
3. Slide the OFF ON ALARM Switch to the "ON" position.
4. To silence the alarm, slide the OFF ON ALARM Switch to the "OFF" position.
5. To use the snooze feature to silence the alarm, press the SNOOZE Button when the alarm sounds. The alarm will be silenced for about nine (9) minutes and then sound again.